

## Multipoint Locking Hardware Operation

### How to Lock

1. Close door to depress the *black door-position-tab*.
2. Turn *thumb-turn* or *key* to extend deadbolt; door is locked at deadbolt only.
3. After deadbolt is extended, lift *lever* to extend and engage remote locking hooks.

\* If *lever* is lifted first, this will engage remote locking hooks only – (without the deadbolt). Note that the door is not secure until deadbolt is engaged with *key* or *thumb-turn*; turn *thumb-turn* or *key* to throw deadbolt and secure door.



### How to Unlock (Open Door)

1. Retract deadbolt with *key* or *thumb-turn*.
2. Push down on *lever*.

## IMPORTANT NOTES: Multipoint Lock Operation:

### Change Handing:

1. *Springlatch*: pulls out and spins round to change Bevel.
2. *Black door-position-tab*: push to flip to other side.

### Operator Type:

3. Requires: *Multipoint Lock Trim*:

Emtek Configuration #4 or  
Baldwin Configuration #6

American Cylinder Above Lever;  
3-5/8" Lever to Cylinder C-C  
1-13/16" Cylinder to Thru-Bolt C-C  
1-13/16" Lever to Thru-Bolt C-C

